WINDSHIELD TAGS

MOUNTING INSTRUCTIONS

The following mounting instructions apply to all Neology windshield inside-mounted tags. The purpose of the instruction is to mount the tag so that it is easily detected by tolling reader antennas and safer location with less distraction of drivers view.

NOTE: If you have another toll transponder installed on your windshield you will need to choose a location **12 inches** from the previously installed tag preferably in horizontal direction.

Tag Options:



Windshield Sticker



Hardcase



Two-Position Switch



Three-Position Switch

1 Choose where to mount the toll tag **inside** your windshield. Ideally, it will be 4" from top of windshield and 2" from the edge of rearview mirror sensor housing to minimize blocking drivers view. Some vehicles have specific location for mounting RFID toll tags to avoid lossy areas in the windshield. Recommended tags locations in these vehicles are described in vehicle manual.

© Neology 2026 | All Rights Reserved | v1

2 Clean the glass on the inside of your windshield in the chosen placement area.

3 Carefully peel the liner from sticker tag avoiding bending the tag. If hardcase or switchable tag, remove protective layer covering on the dual lock adhesive. Avoid touching the adhesive.



4 Place the tag on the described installation location:

Figure 1: For single glass windshield, place 2 inches horizontal from rearview mirror sensors and 4 inches vertical from glass frame to minimize blockage of driver views. ***Do not remove the sticker tag once placed in position.***

Figure 2: For split glass windshield with a support frame in the middle. Distance will be 4 inches from top and middle support frame as shown.

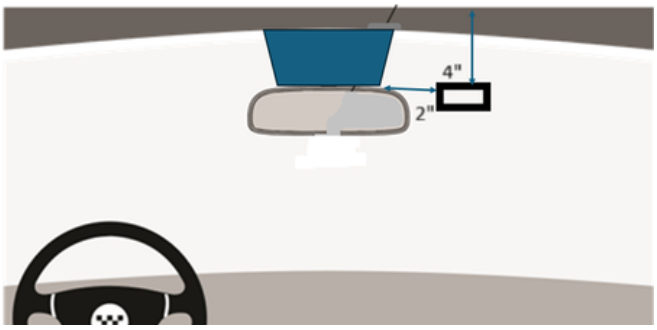

Figure 1

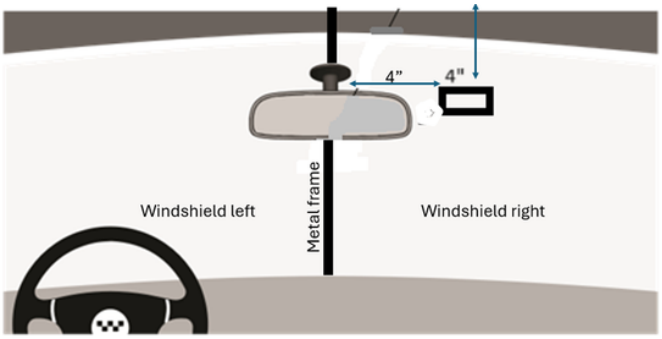

Figure 2

5 Dual lock mounted tags can be removed and placed again if desired using dual lock mechanism.

© Neology 2026 | All Rights Reserved | v1